


# AutoHarnessHouse.com – Backup camera Relocation harness


[inquiry@autoharnesshouse.com](mailto:inquiry@autoharnesshouse.com)

## Installation instructions

- 1) Verify that the vehicle is off.
- 2) Carefully remove the MFD. Find the 8-pin connector and unplug it.
- 3) Connect the black 8-pin connector from the AutoHarnessHouse.com (#1) backup camera relocation harness to the back of the MFD.
- 4) Connect the connector that was unplugged in step 2 to the white (#2) 8-pin connector.

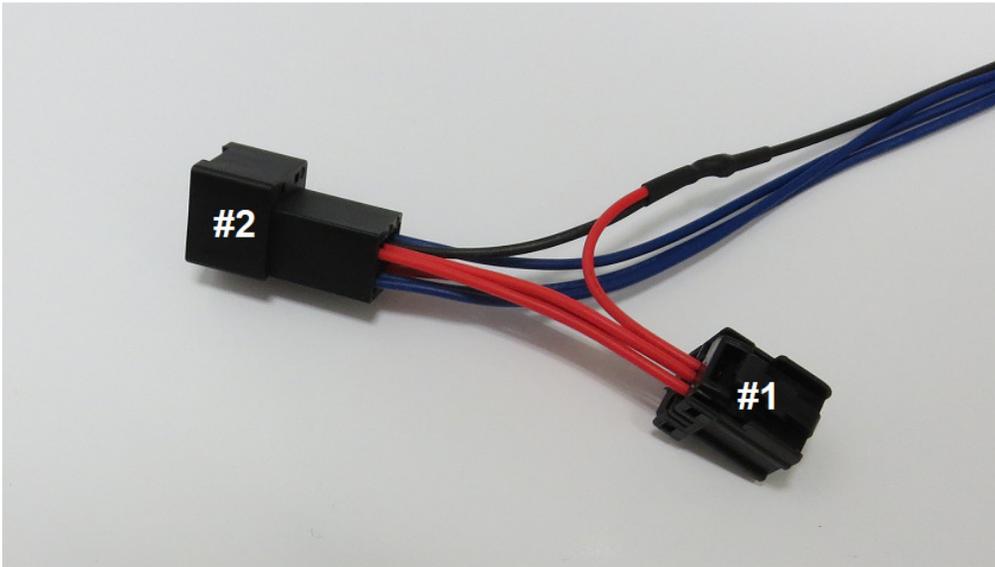

- 5) If not already done, disconnect and slide out the stereo unit.
- 6) Route the other end of the AutoHarnessHouse.com harness to the back of the unit.

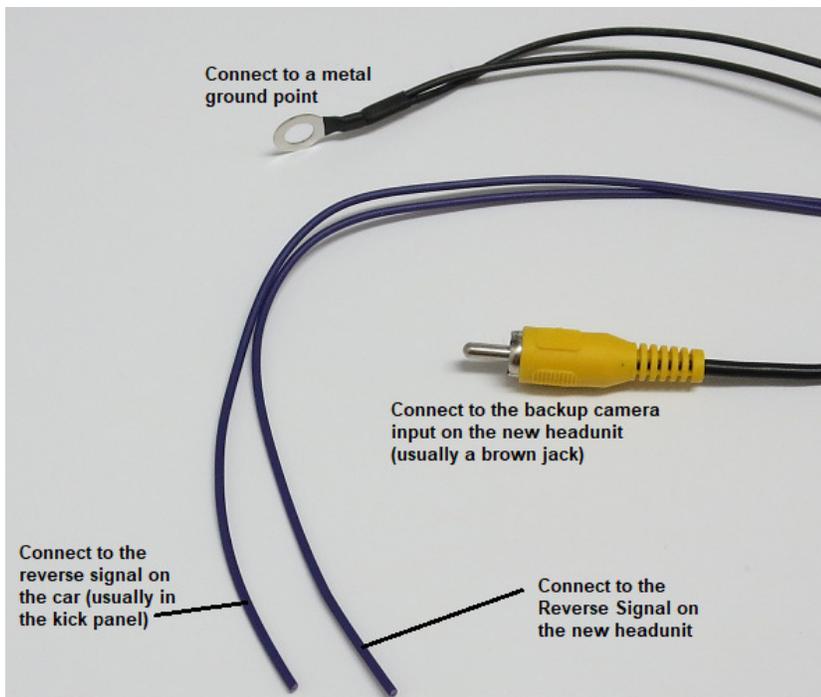

- 7) Connect the yellow video connector to the backup camera input on the new, aftermarket headunit.
- 8) Connect the black wire/wiring ring to a metal ground point.
- 9) Connect one of the purple wires to the reverse signal input on the new headunit.
- 10) Connect the other purple wire to the reverse signal in the kick panel. On the WRX, this is a Brown/Yellow wire that can be seen in the picture below. (See the wire with the blue splice clip on it)
  - a. This post shows where the reverse signal can be accessed on a 2015 WRX (Please contact us for 2015 Forester): <http://forums.nasioc.com/forums/showthread.php?p=44422571&posted=1#post44422571>



- 11) Reinstall everything and test to verify proper function.

Note: It is best to connect all electrical connections and test prior to final reassembly.